




MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

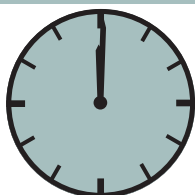

60 Minuten

weight: ca.5,0 kg

SILL PROTECTION SIDEWAYS/SCHWELLERSCHUTZBLECH SETTLICH

- Artikel-Nr: 19R 4054



Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-0

M6:
10 Nm
M8 (A2):
21,4 Nm
M6:
2 Nm



10
13

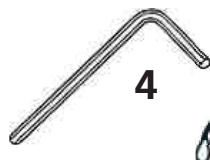

4



Ø12,5



19R4054.1 / 19R5054.1
19R4054.2 / 19R5054.2

1

2x




mounting kit: 19R9054

2

19R5067_R / 19R5068_L

6x

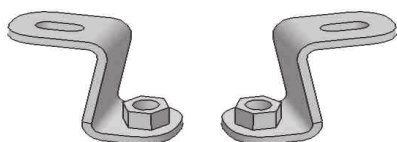

	M8x20; DIN 933 A2	6x
	M6x25; ähnl.ISO 7380 A2	10x
	M6; DIN 934 Zn	6x
	Getowell M6	10x

3

19R5259

6x



M6

4

005495

6x



Ø6,6


5

005498

6x



Ø9 A2

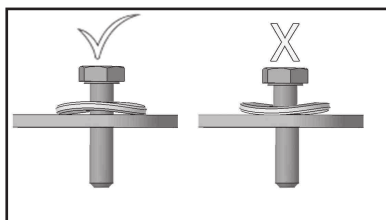

article no.:




19R4054 (S) inox

19R4054 M electropolished

Revision 1: 11.03.2019






page/Seite 2

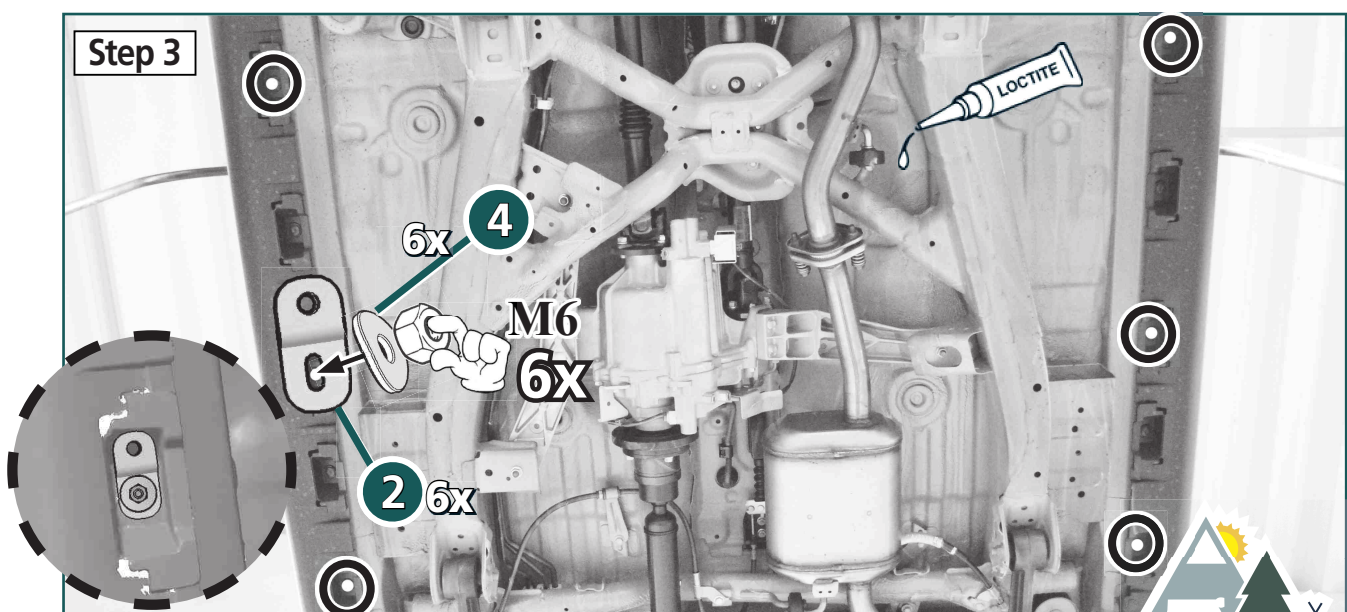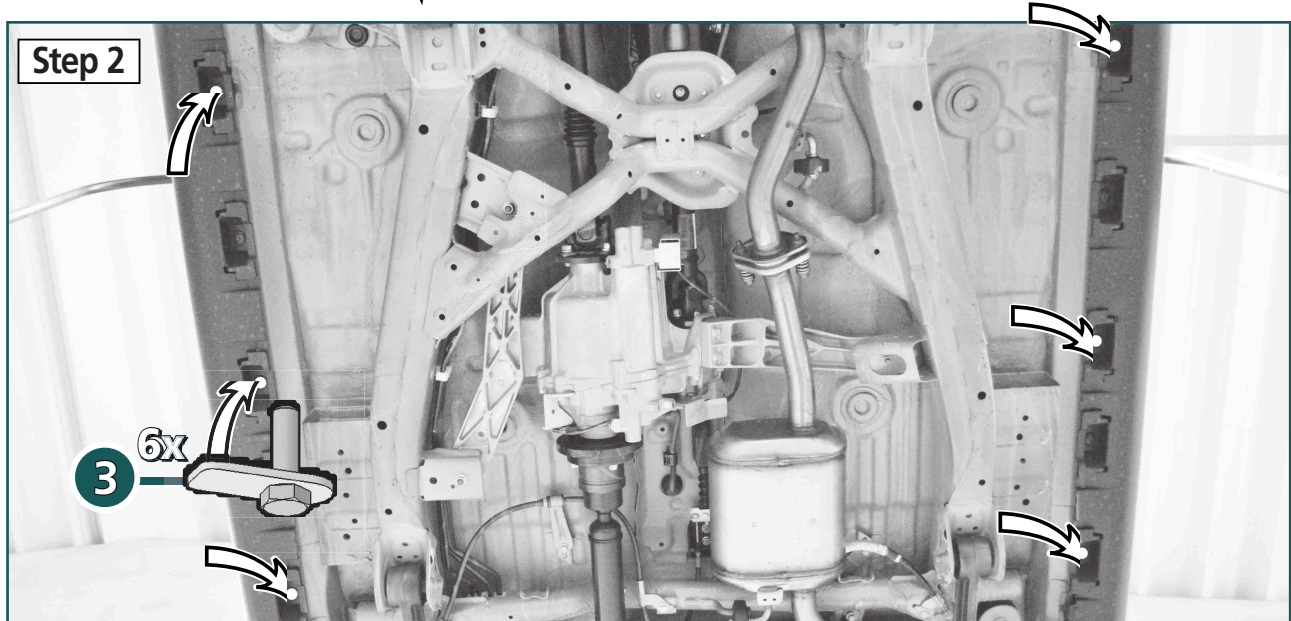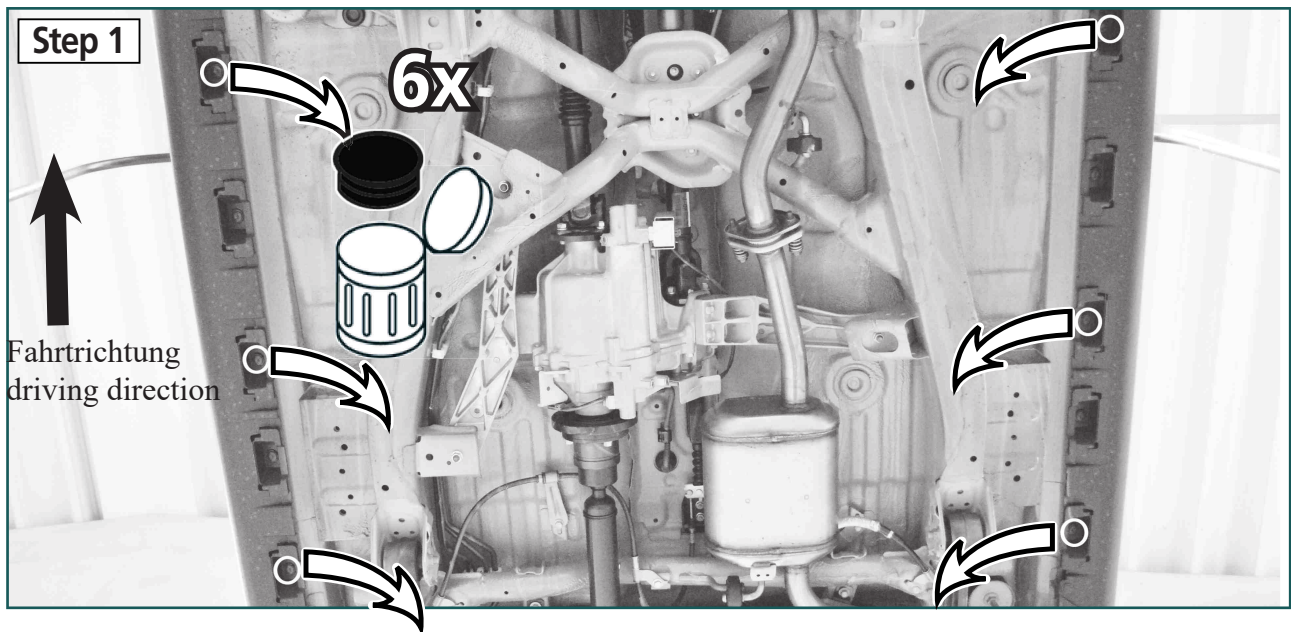

article no.:
19R4054 (S) inox
19R4054 M electropolished

Revision 1: 11.03.2019






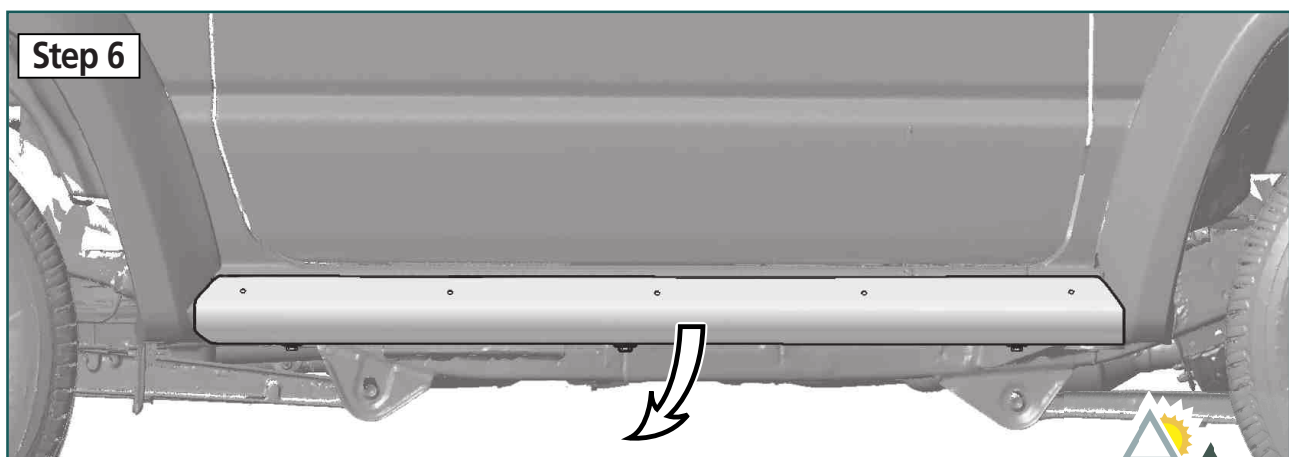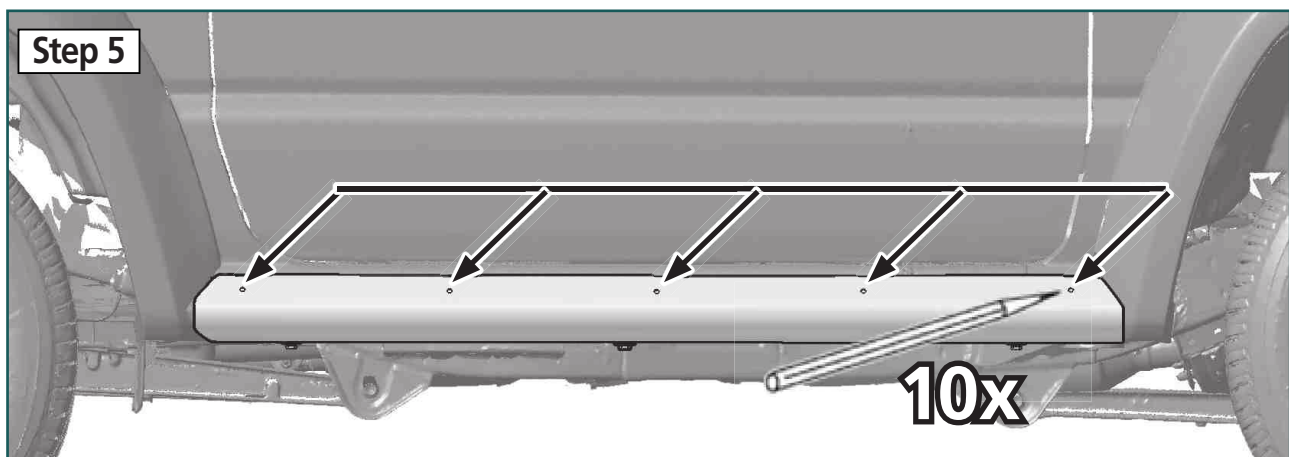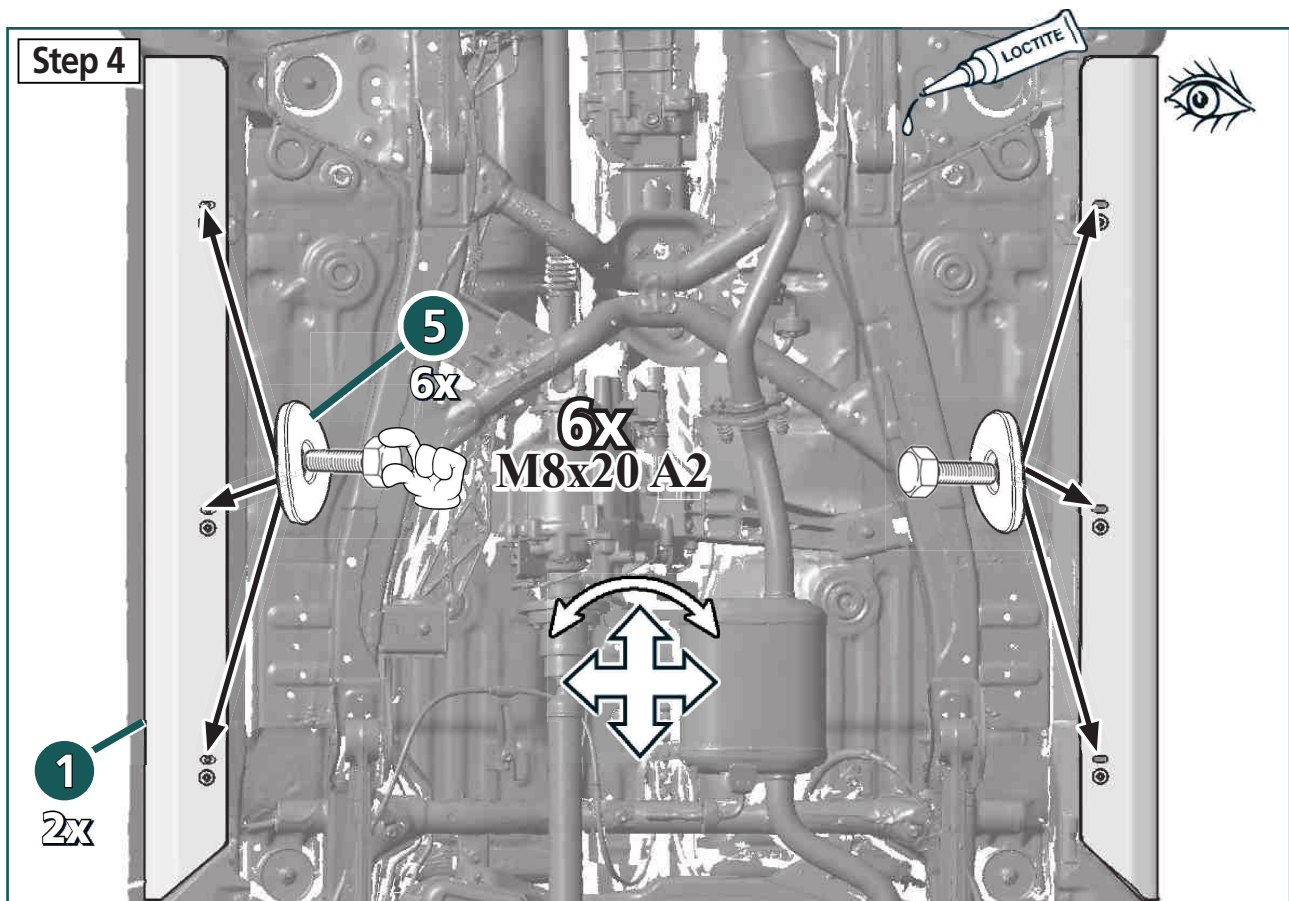

article no.:
19R4054 (S) inox
19R4054 M electropolished

Revision 1: 11.03.2019



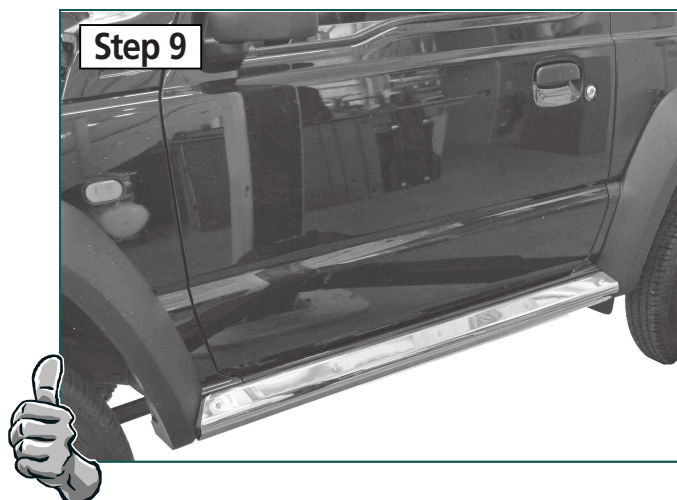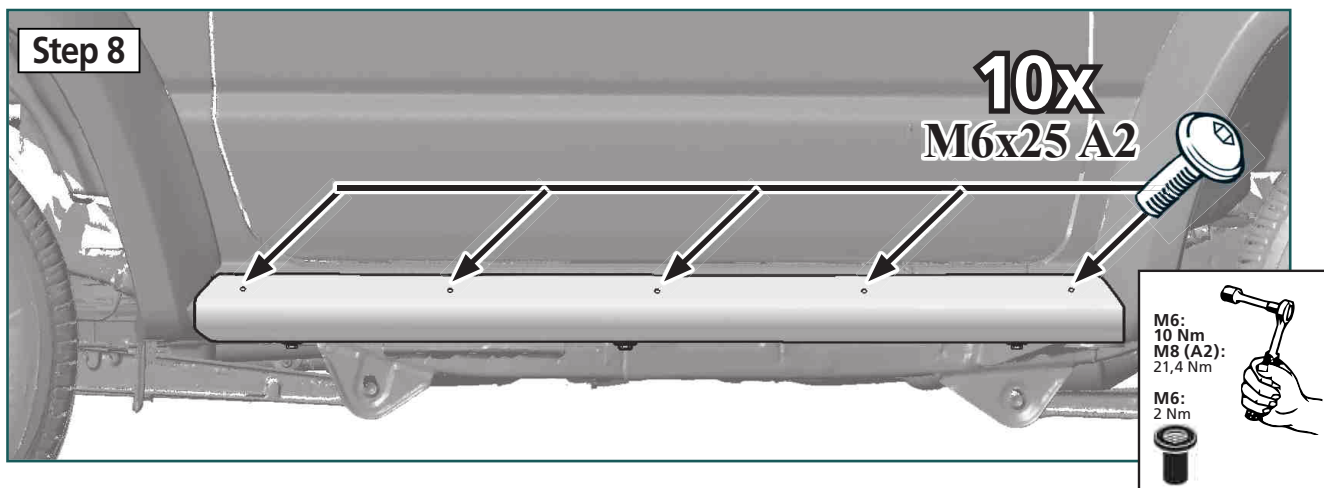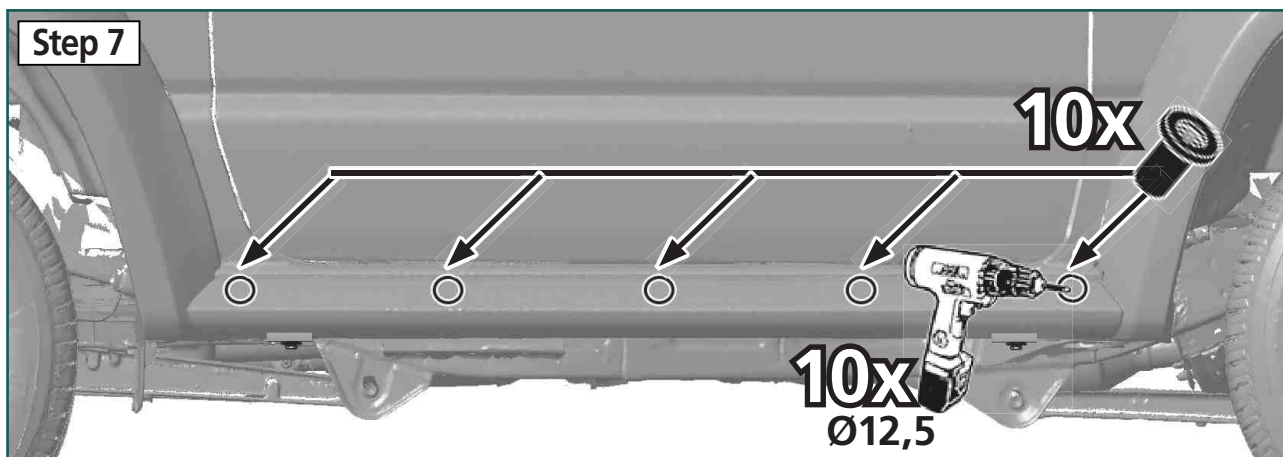

article no.:
19R4054 (S) inox
19R4054 M electropolished

Revision 1: 11.03.2019

