



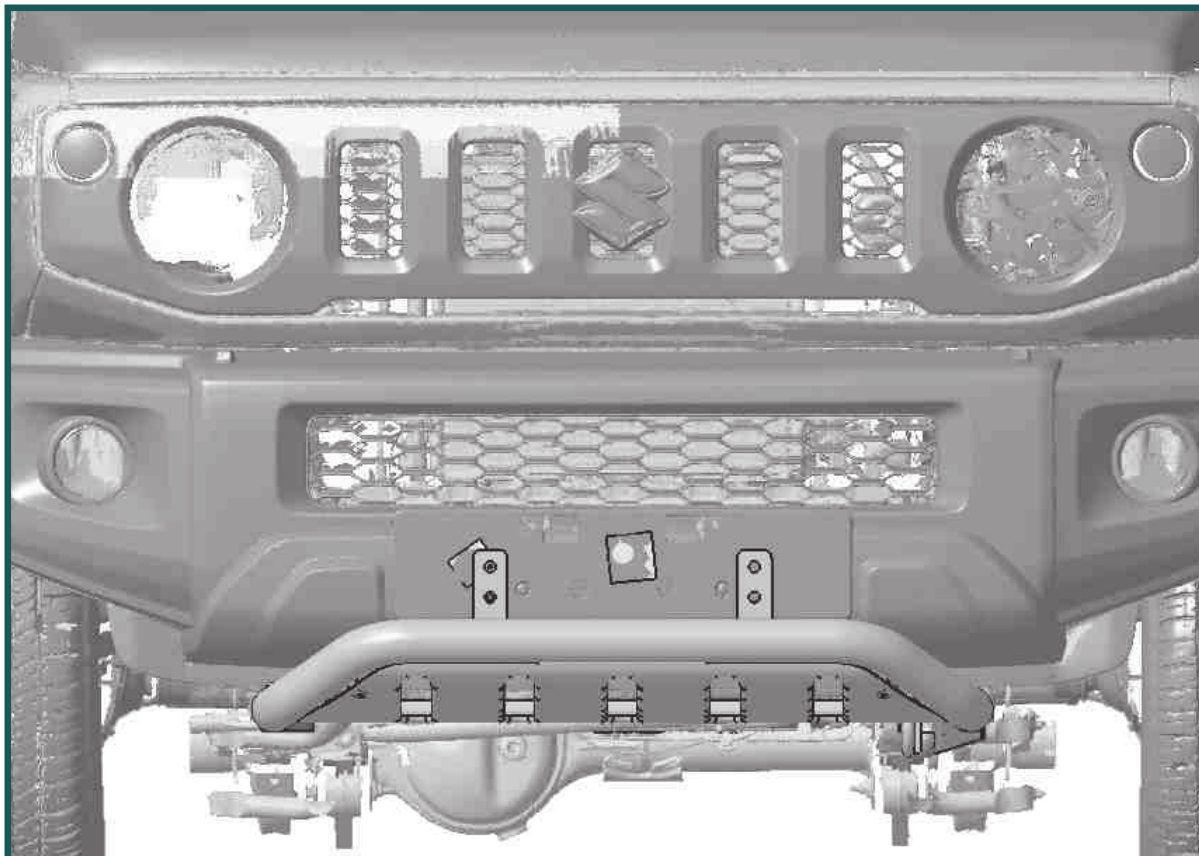

MONTAGEANLEITUNG ASSEMBLING INSTRUCTIONS

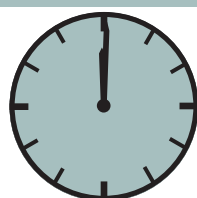

60 Minuten

weight: ca.4,5 kg

EU-BUMPER PROTECTION BAR 51 WITH UNDERRIDE GUARD PLATE/ EU-ANFAHRSCUTZ 51 MIT UNTER-FAHRSCUTZBLECH – Artikel-Nr: 19R 4017


Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-0


M8(A2):
21,4 Nm
M10:
50 Nm
M6:
2 Nm



13
17

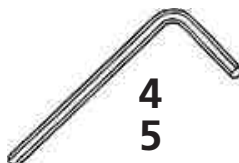

4
5

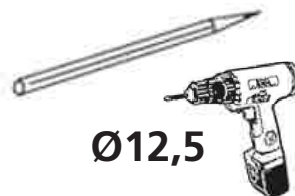


Ø12,5

19R4017.1 / 19R5017.1

1

1x

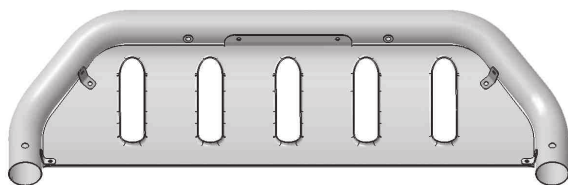


mounting kit: 19R9017

	M6x25; DIN 7991 Zn	4x
	M8x25; ähnl.ISO 7380 A2	2x
	M8x25; DIN 933 A2	2x
	M10x40; DIN 933 Zn	1x
	M10x50; DIN 933 Zn	1x
	M10; DIN 934 Zn	1x
	Getowell M6	4x

2

19R5062


2x



3

19R5042_R


1x

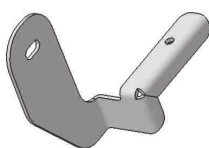

4

19R5043_L

1x

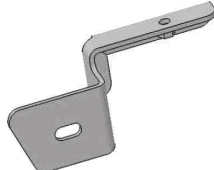

5

19R5057


1x



6

19R5058

1x

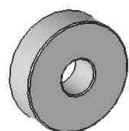

9

005498

2x

Ø9 A2



10

005493

3x


Ø11



7

19R5044

1x





M10

8

19R5120

1x

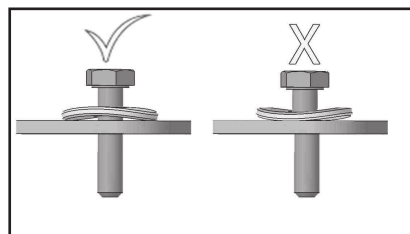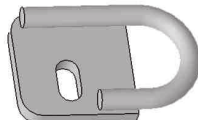

article no.:




19R4017 (S) inox








19R5017 black steel

Revision 2: 17.07.2019



page/Seite 2

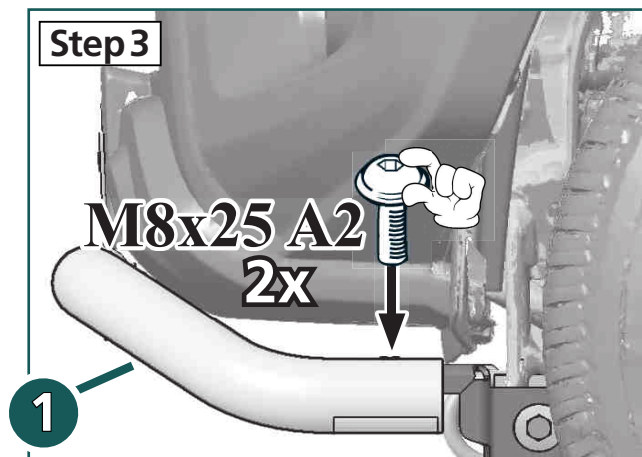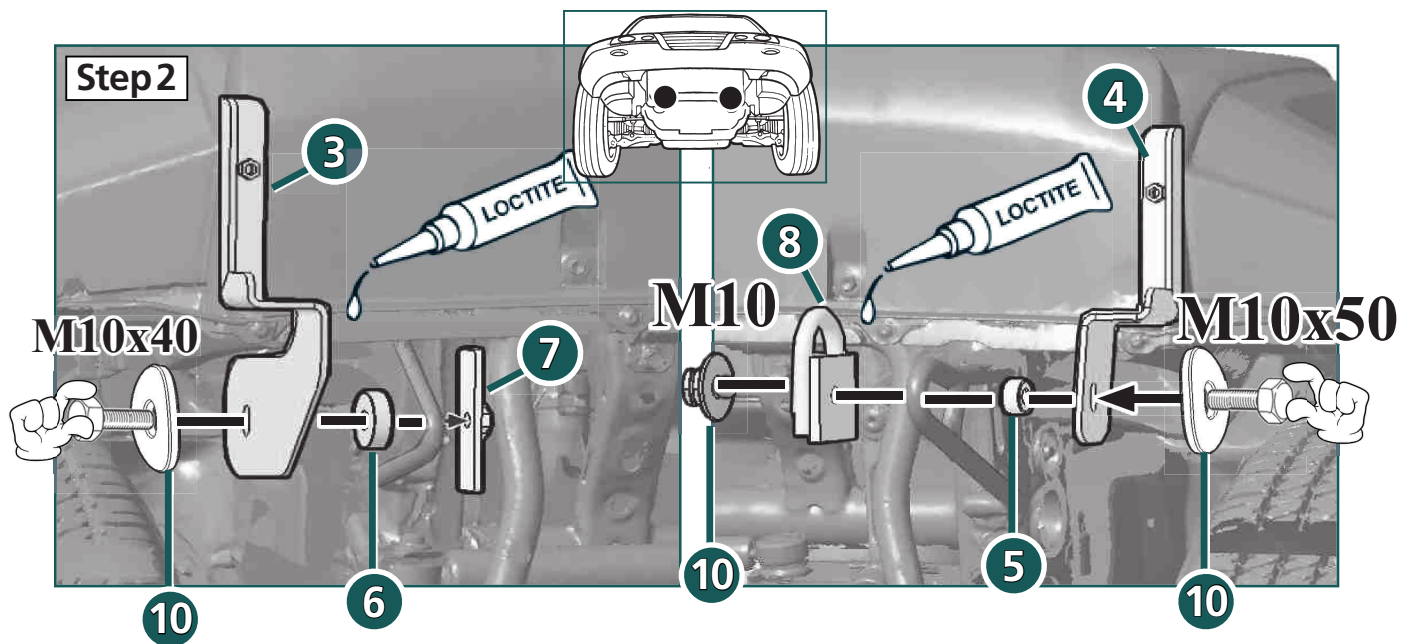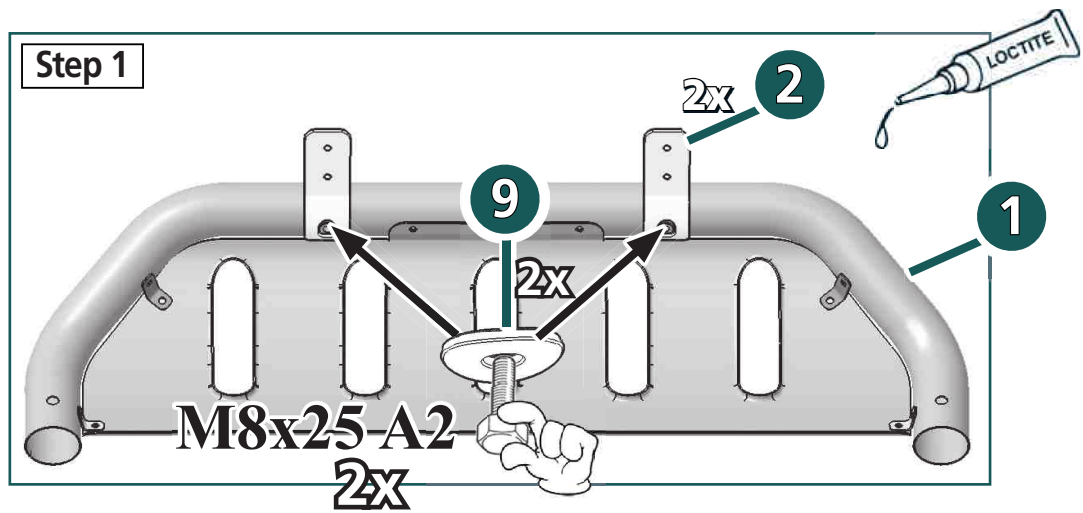

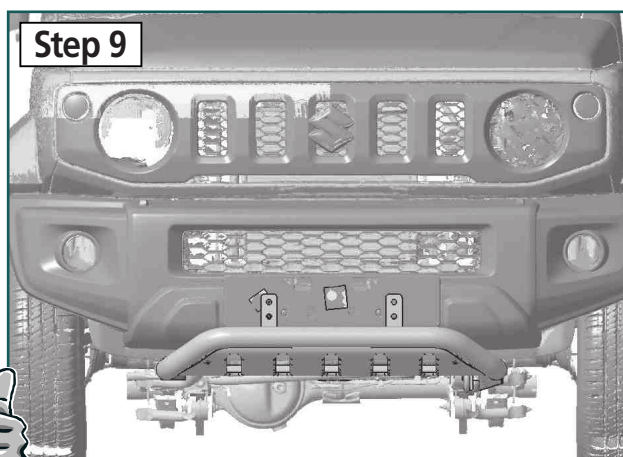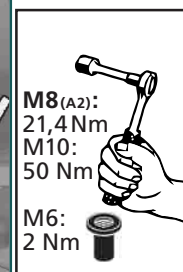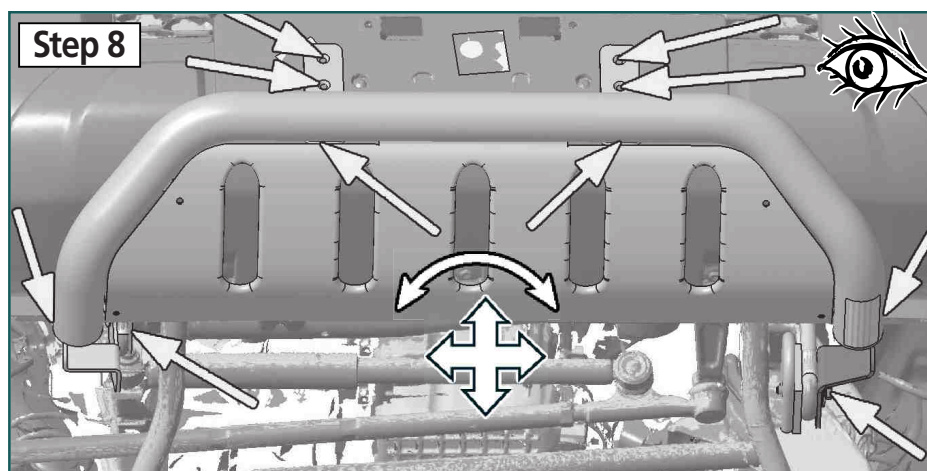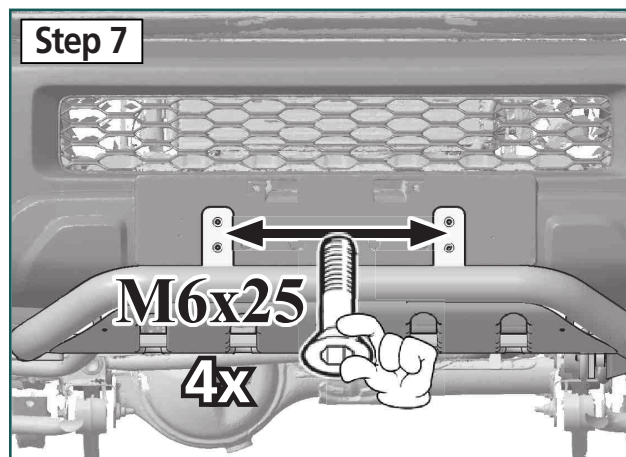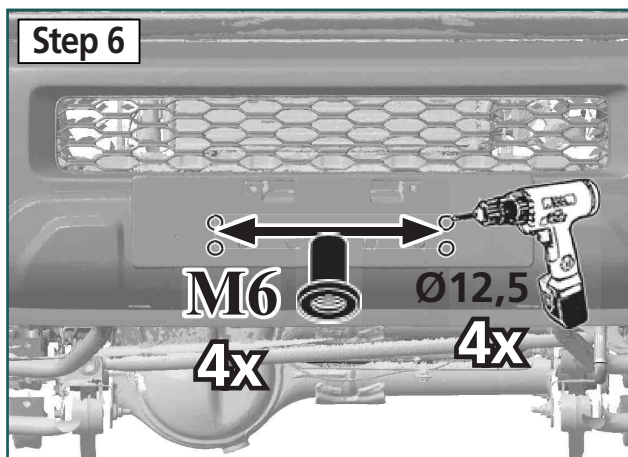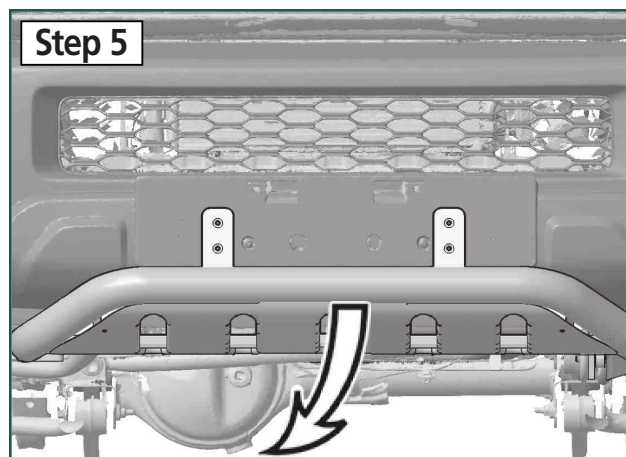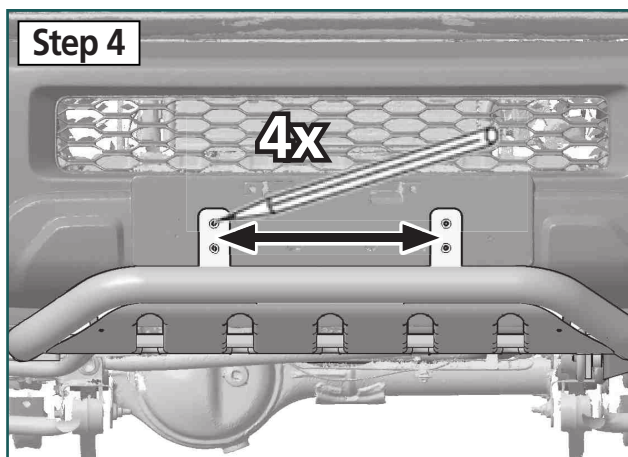

article no.:
19R4017 (S) inox
19R5017 black steel

Revision 2: 17.07.2019

