


**102
4001**

Suzuki Jimny

EU-Frontal Protection Bar 60 mm

EU-Frontschutzbügel 60 mm

Protection contre les collisions, homologuée CEE, 60 mm

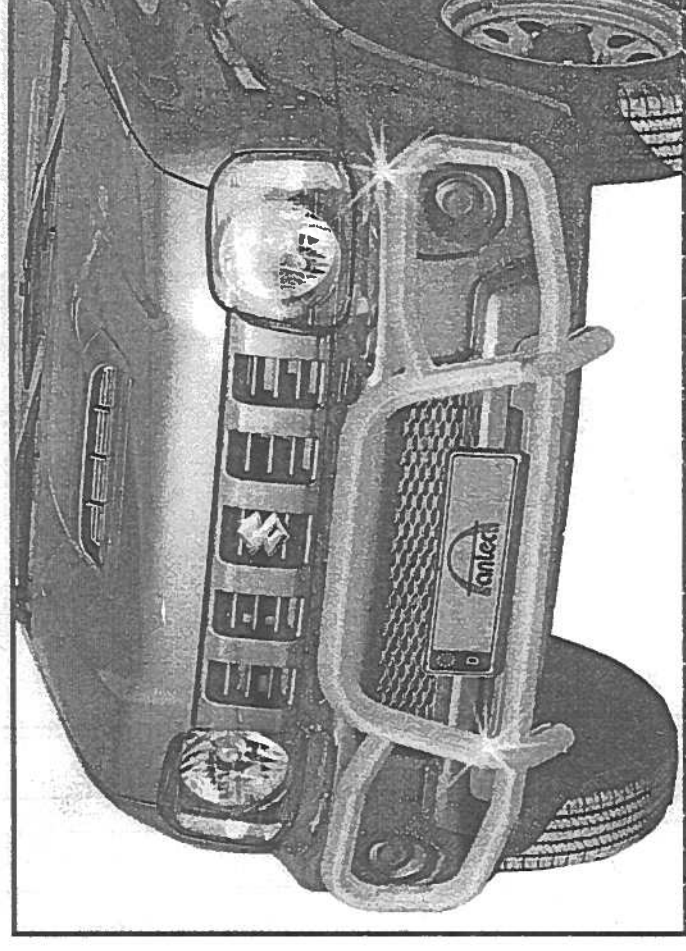

ASSEMBLY INSTRUCTION


Montageanleitung • Instructions de montage







90 Minuten

Artikel-Nr:
1024001 stainless steel
1025001 black steel




Revision 3: 04.07.2016

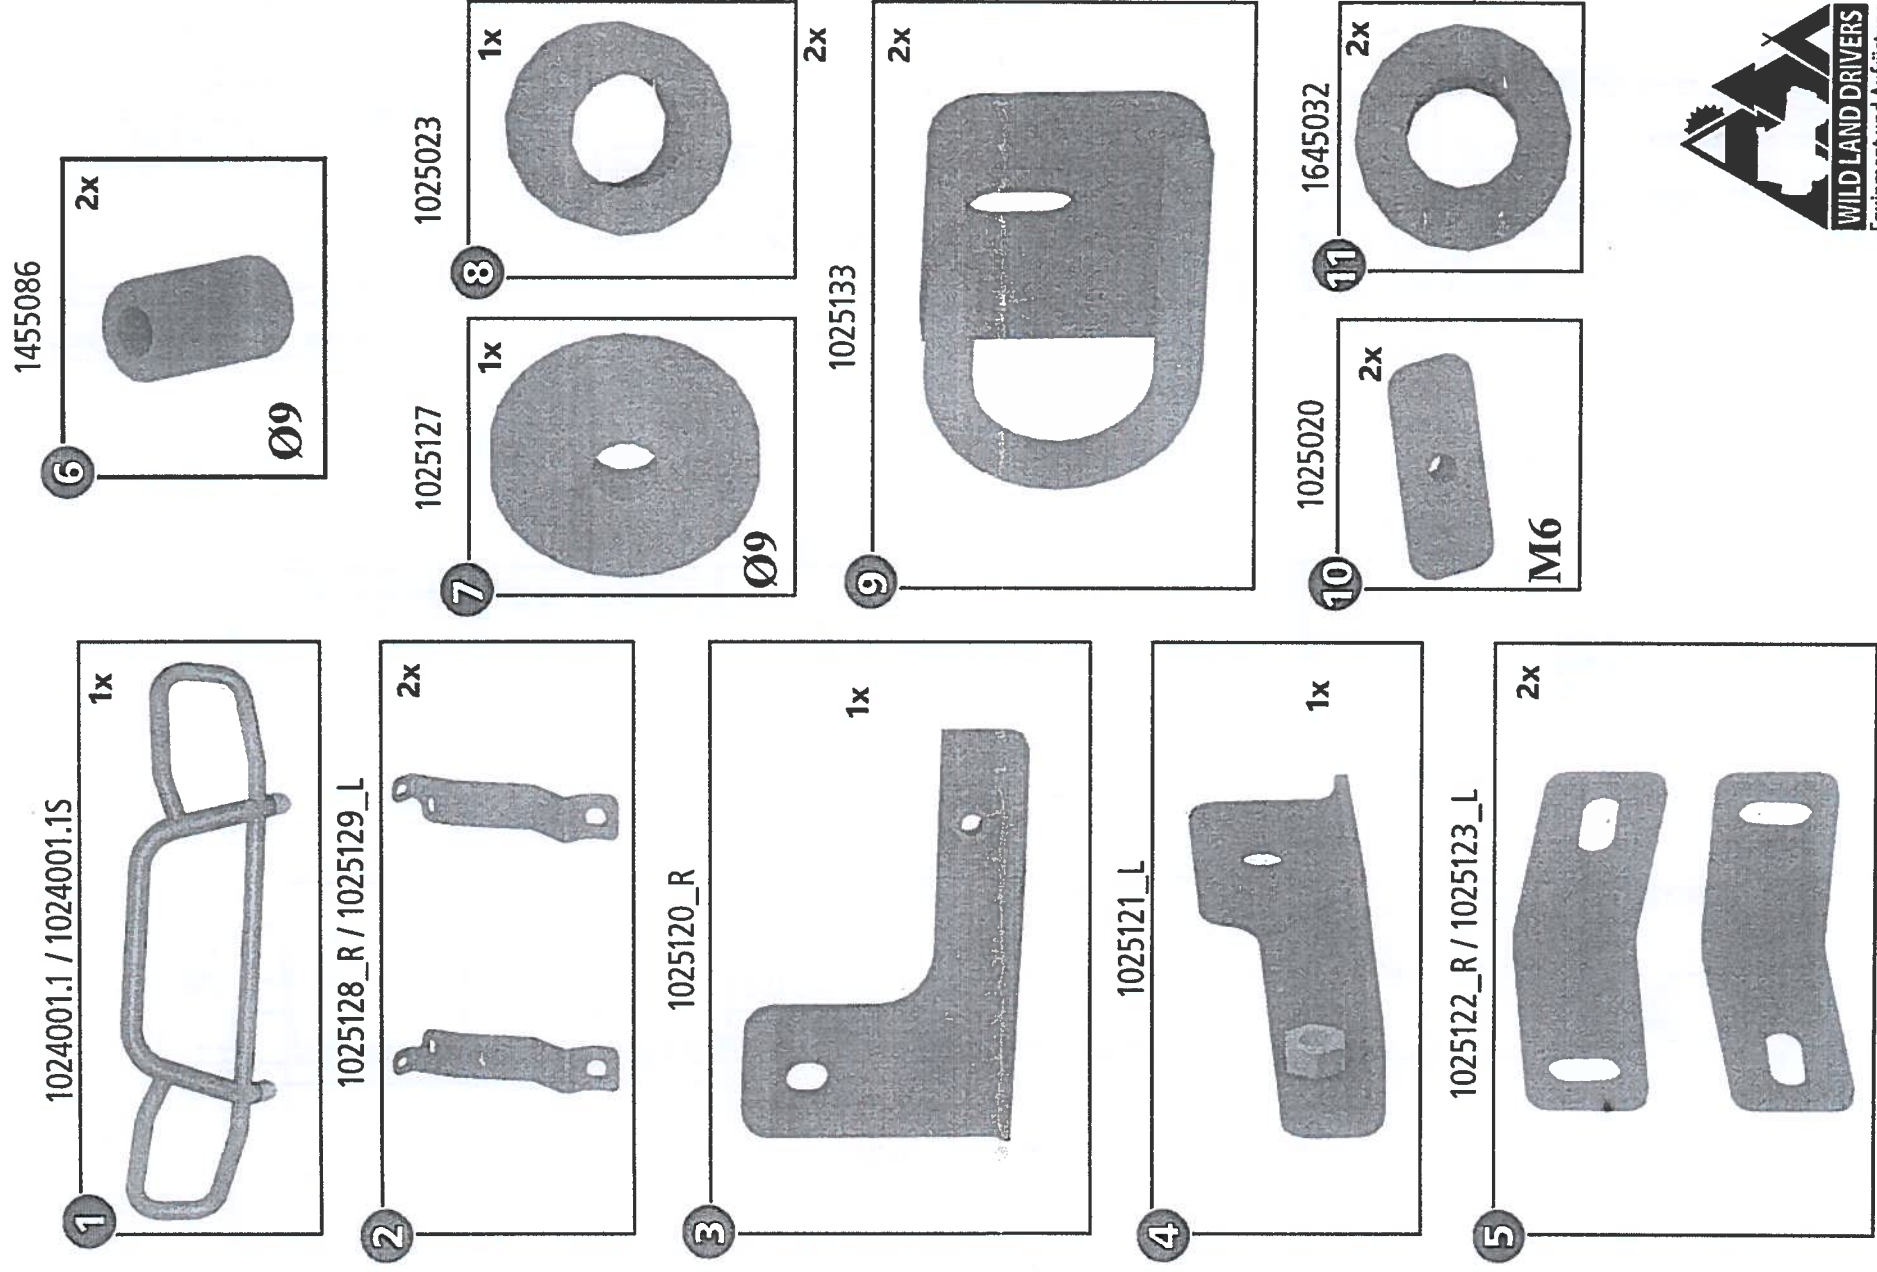



Revision 3: 04.07.2016

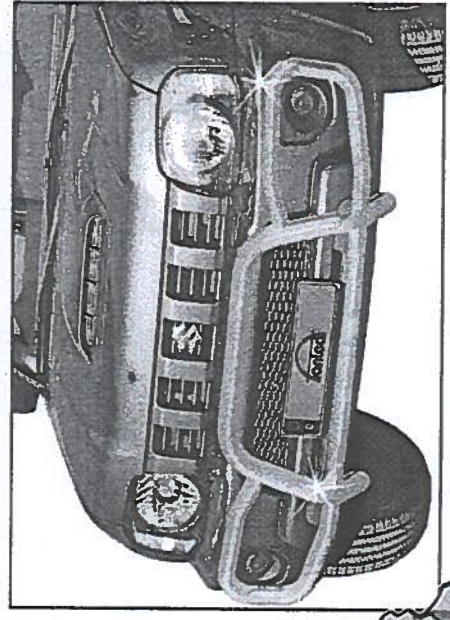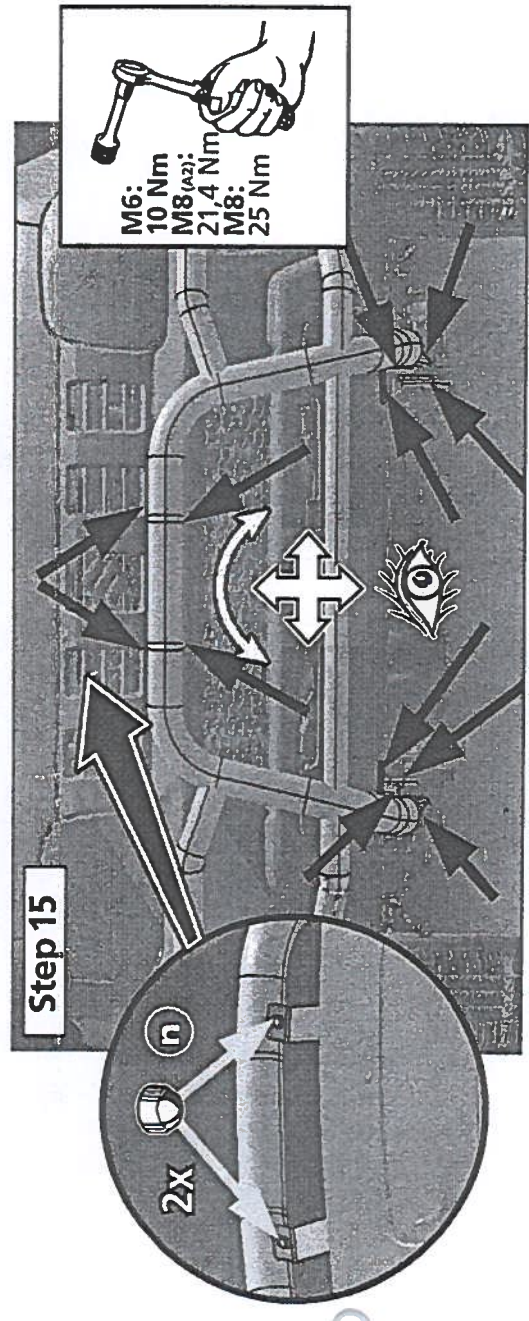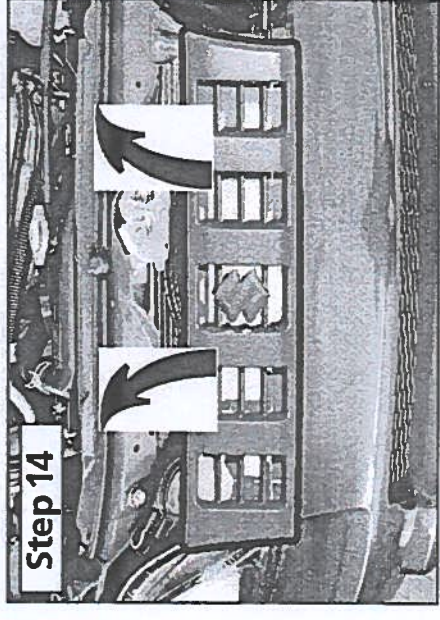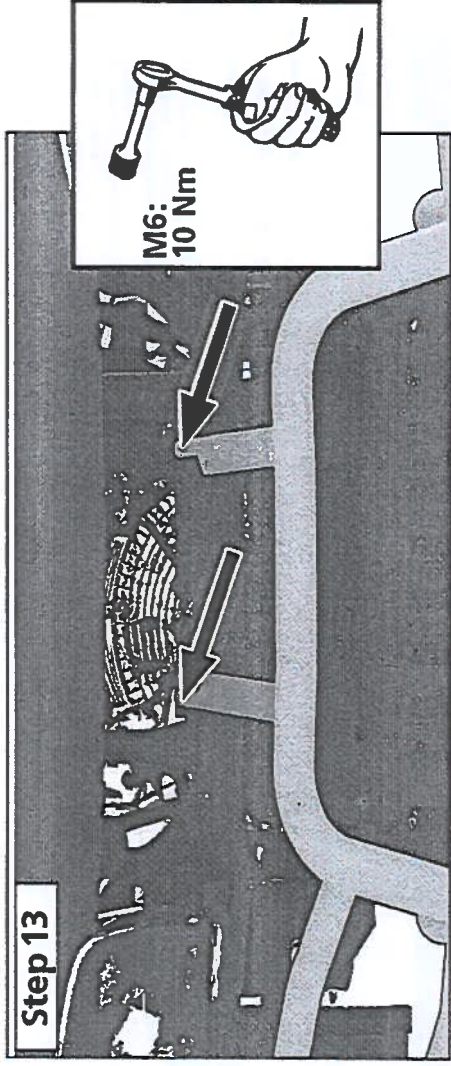





Revision 3: 04.07.2016

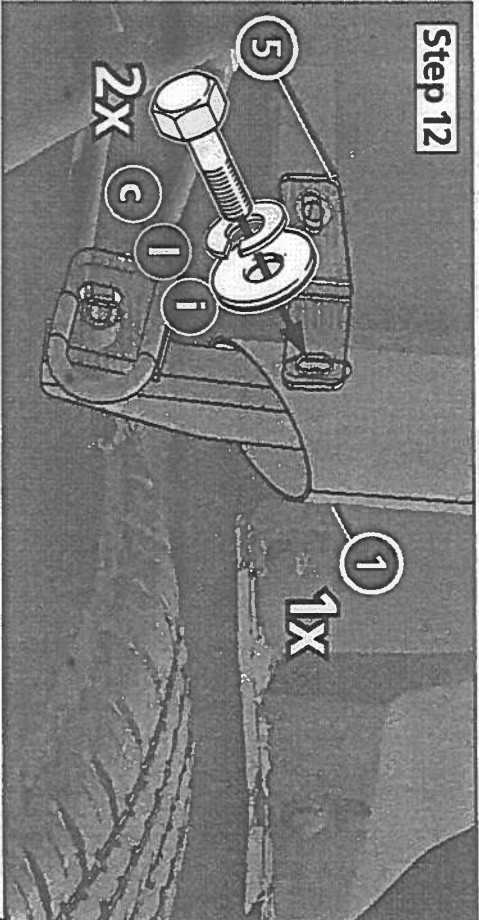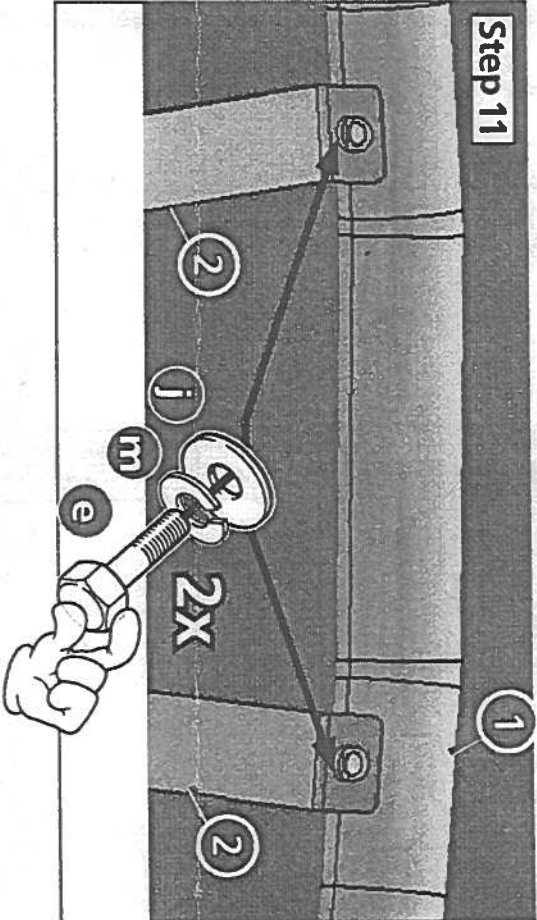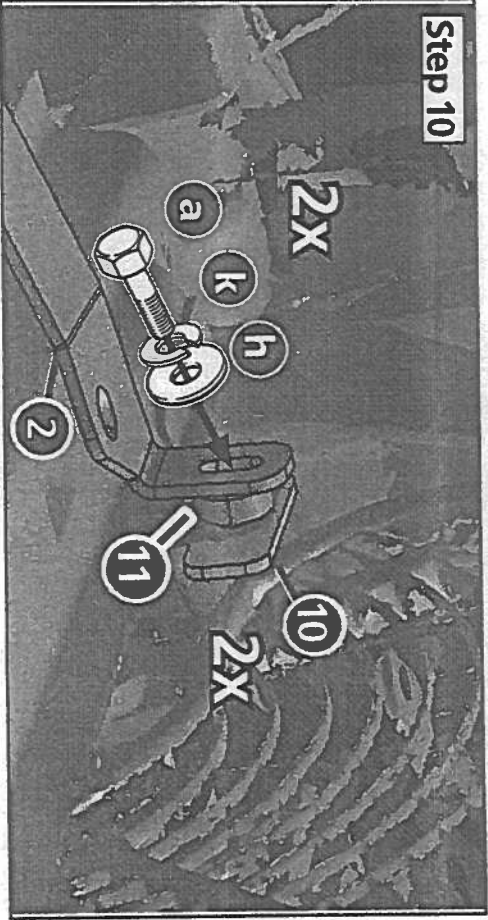

M6: 10 Nm
M8_(a2): 21,4 Nm
M8: 25 Nm




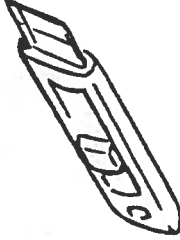



a		M6x25; DIN 933 Zn	2x
b		M6x55(60); DIN 933 Zn	2x
c		M8x25; DIN 933 Zn	2x
e		M8x30; DIN 933 A2	2x
f		M8x50; DIN 933 Zn	2x
g		M8; DIN 934 Zn	2x
h		Ø 6,4; DIN 9021 Zn	4x
i		Ø 8,4; DIN 9021 Zn	6x
j		Ø 8,4; DIN 9021 A2	2x
k		Ø 6; DIN 127 Zn	4x
l		Ø 8; DIN 127 Zn	4x
m		Ø 8; DIN 127 A2	2x
n		SW 13	2x

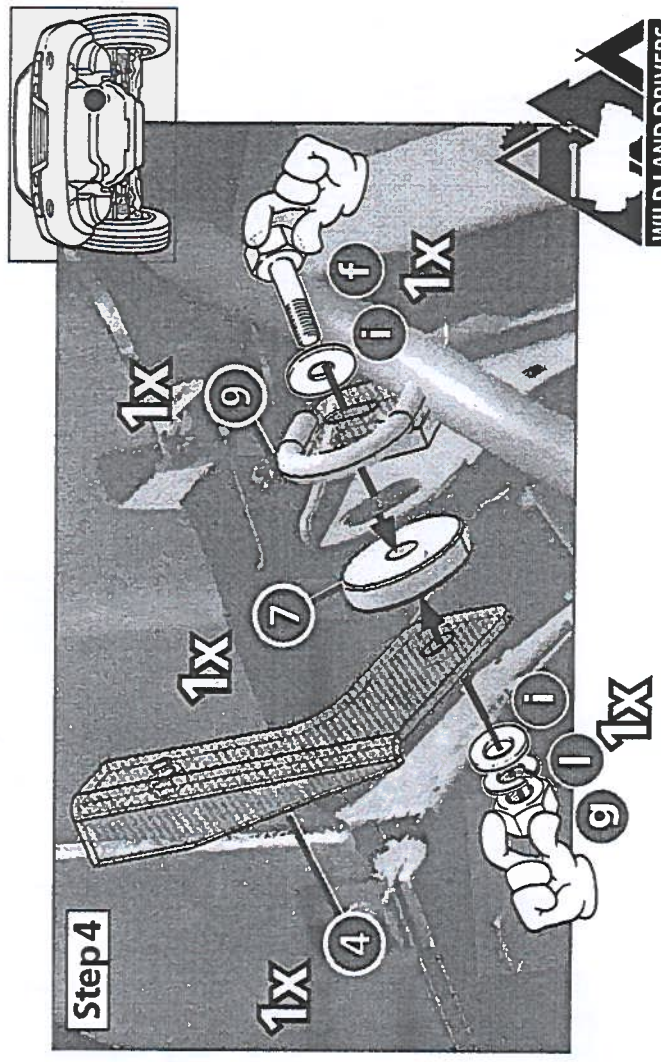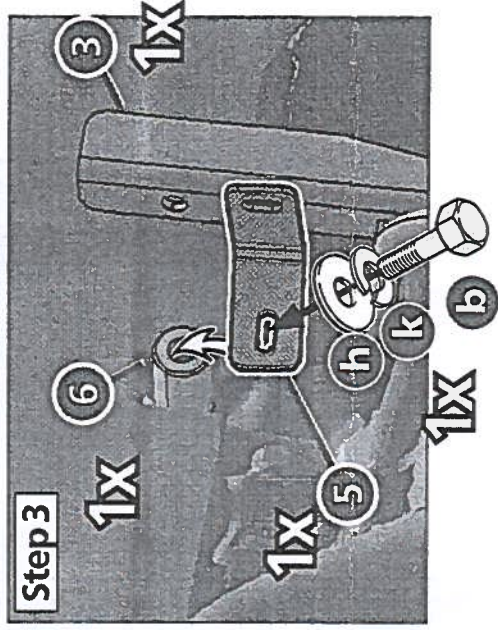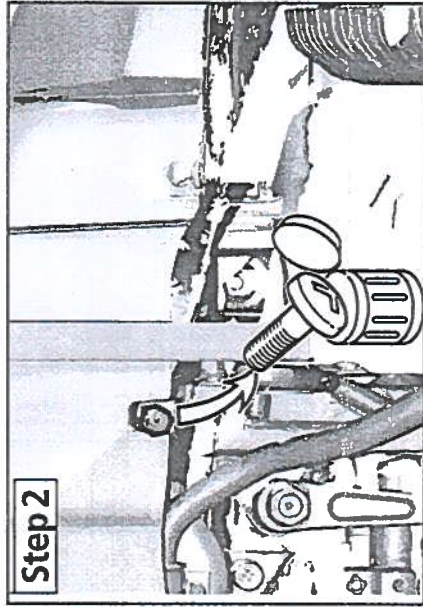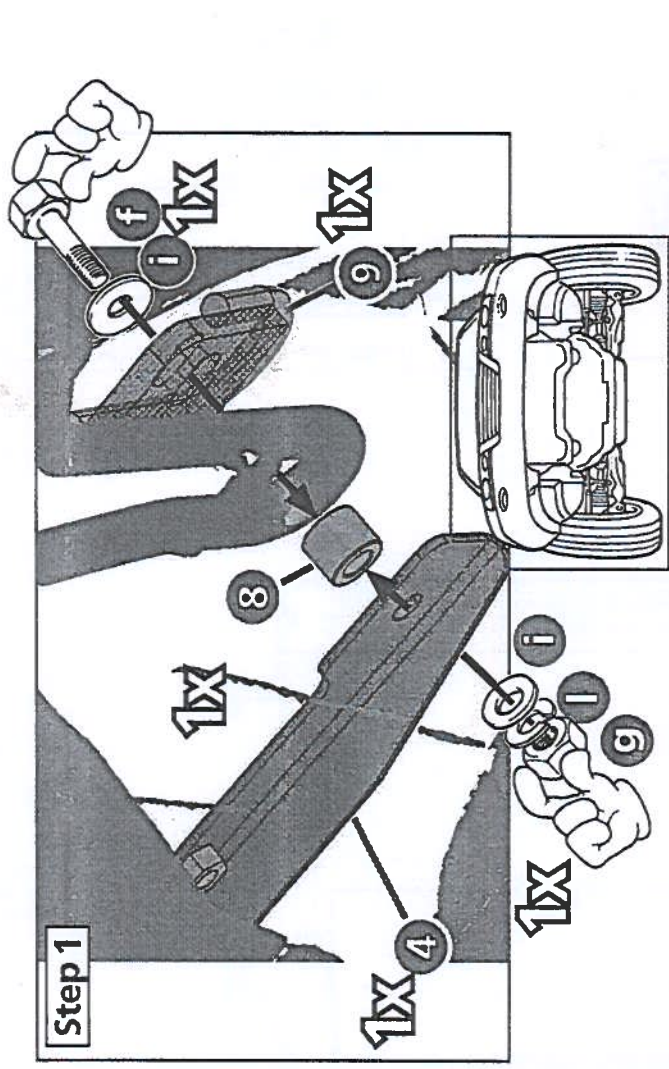

Revision 3: 04.07.2016

page/Seite 4

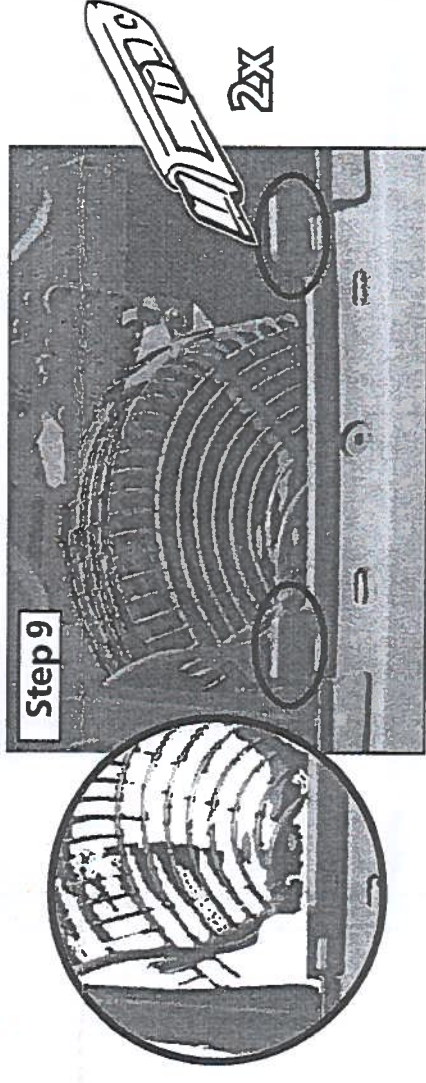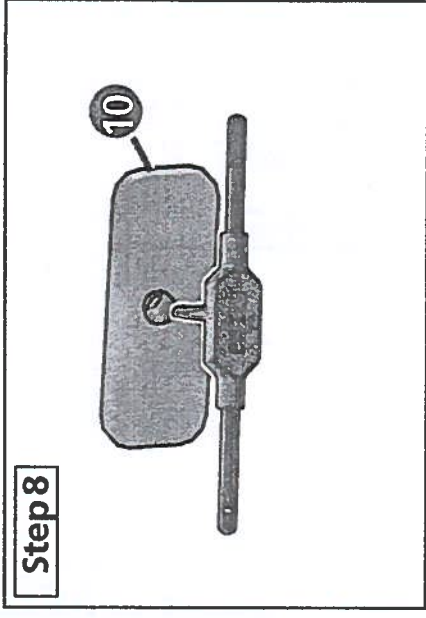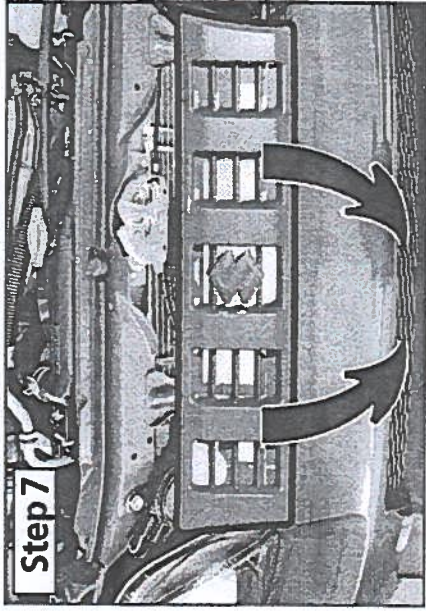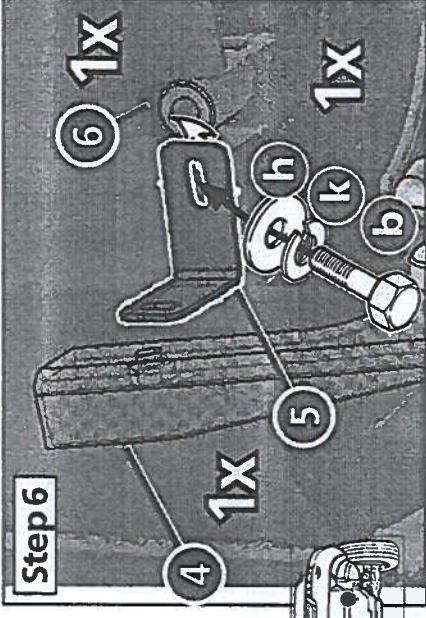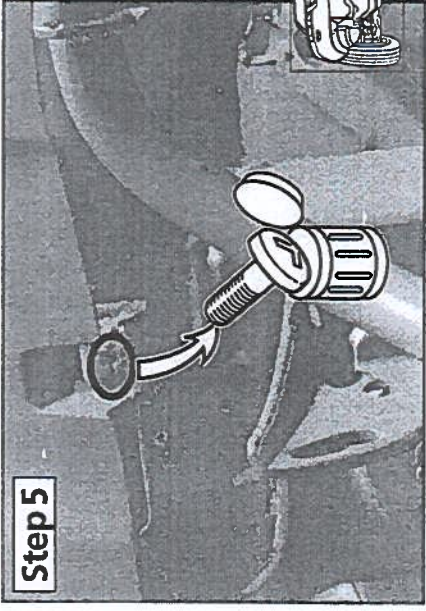

Revision 3: 04.07.2016

page/Seite 5