



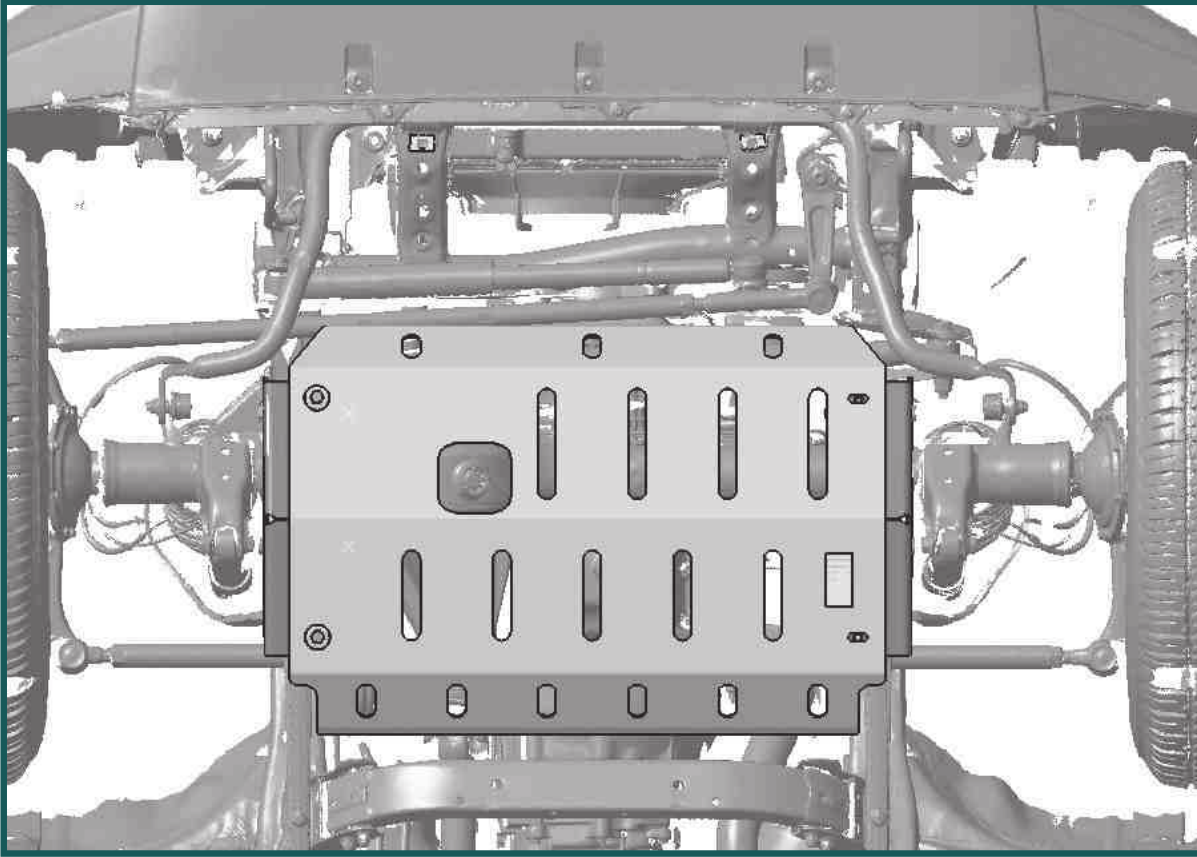

MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

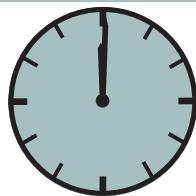

60 Minuten



weight: ca.10,0 kg

MUDGUARD FOR FRONT AXLE DIFFERENTIAL / SCHUTZBLECH FÜR VORDERACHSDIFFERENZIAL




– Artikel-Nr: 19R 5414 steel galvanized

Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-0

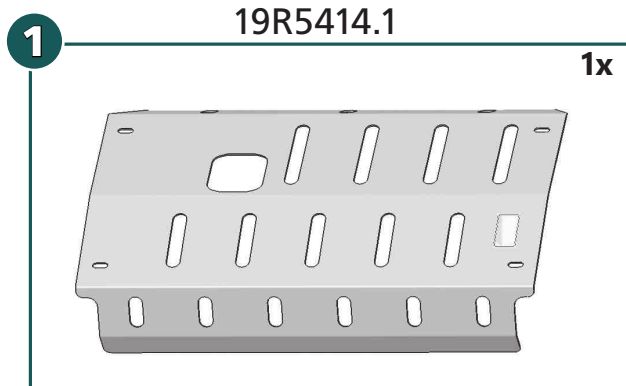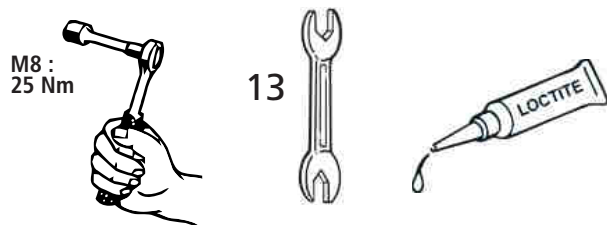

mounting kit: 19R9414

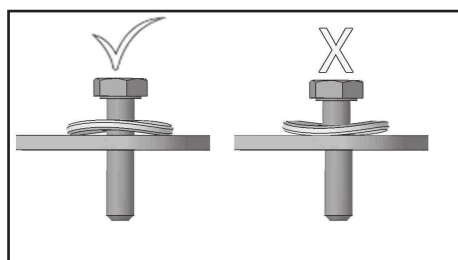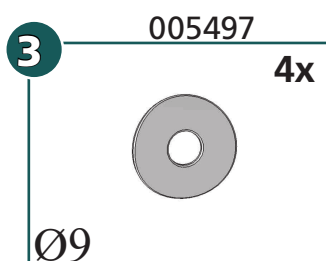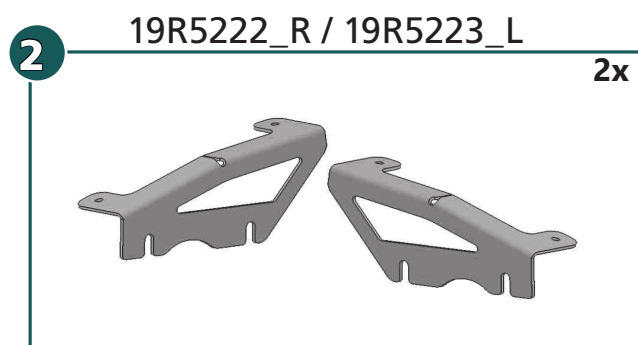

article no.:
19R5414 steel galvanized

Revision 1: 21.05.2019



