



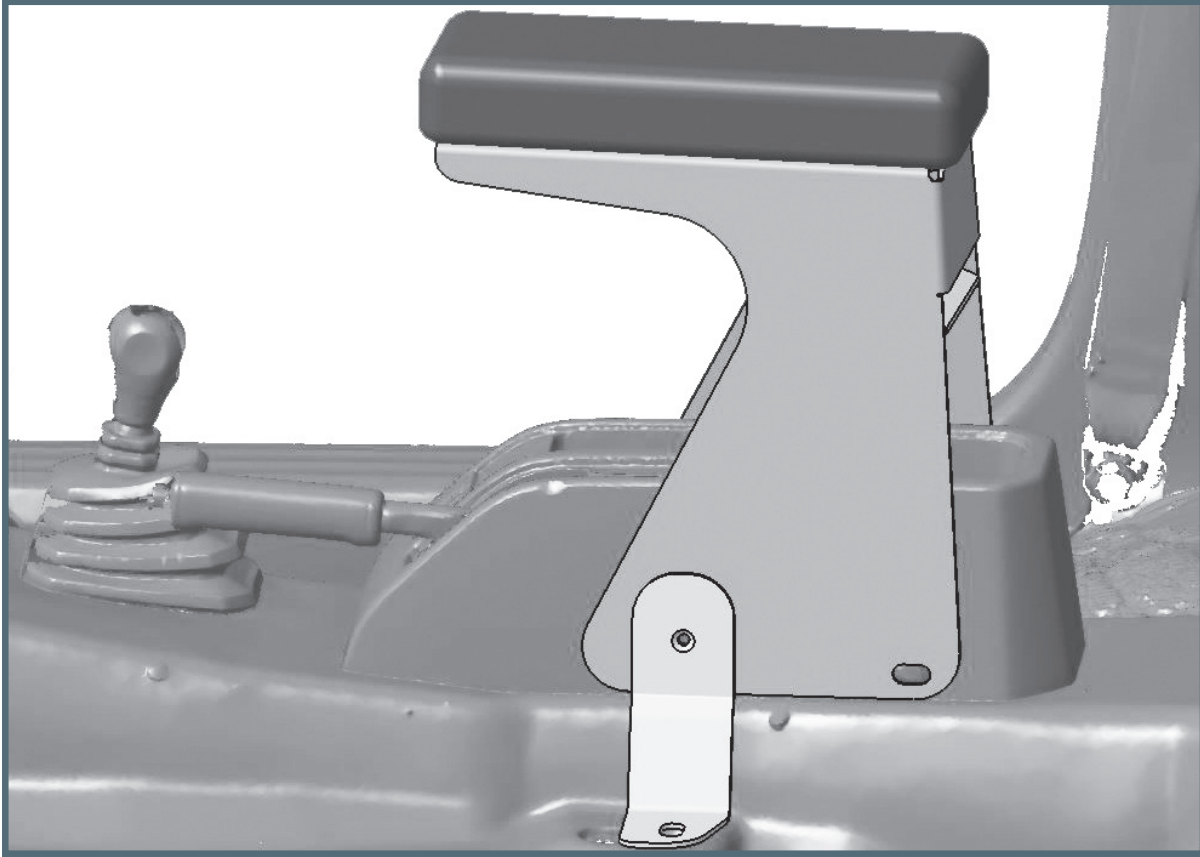

MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

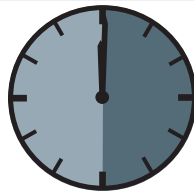

90 Minuten

weight: ca. 4,0 kg

ARMREST INTERIOR / ARMLEHNE INNENRAUM


– Artikel-Nr: 19R 5012

Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-16



mounting kit: 19R9012

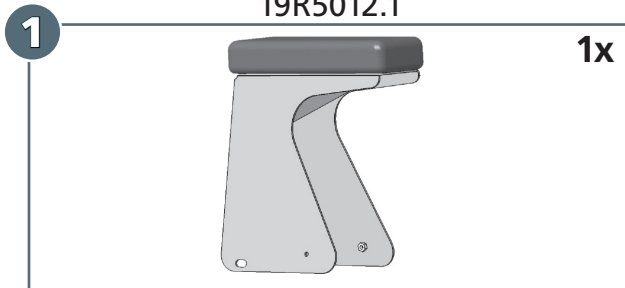

	M6x25; DIN 933 Zn	2x
	M6x20; DIN 7991 Zn	2x
	Geto-Well M6	2x
	SW 10	2x

