



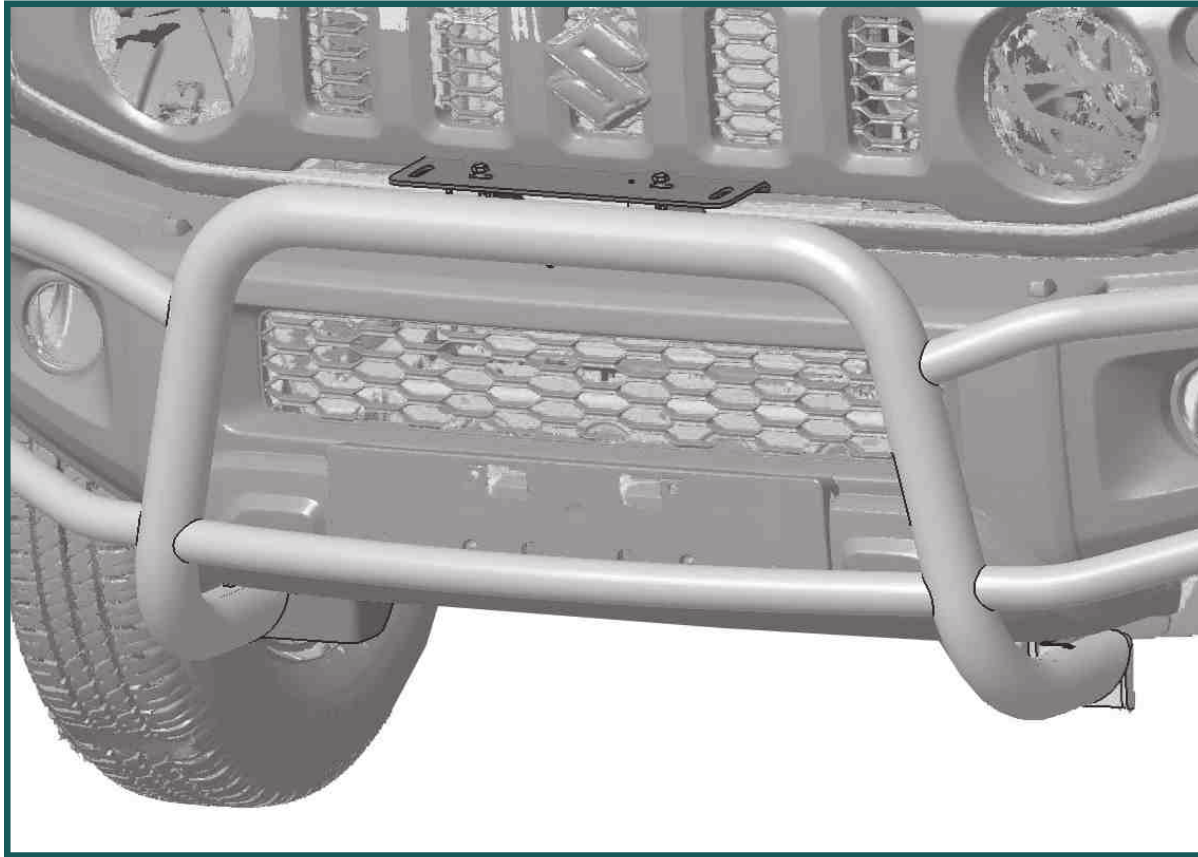

MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

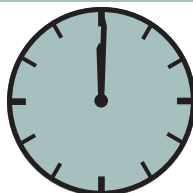

60 Minuten



weight: ca.2,4 kg



HOLDER HEADLIGHT BAR/HALTER SCHEINWERFERBALKEN




- Artikel-Nr: 19R4511S



Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-0

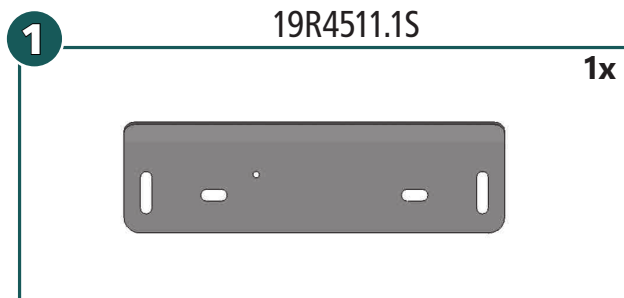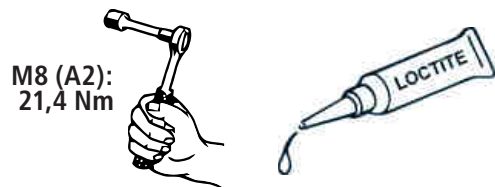

	M8x20; DIN 933 A2	2x
	M8x30; DIN 933 A2	2x
	M8; DIN 934 A2	2x

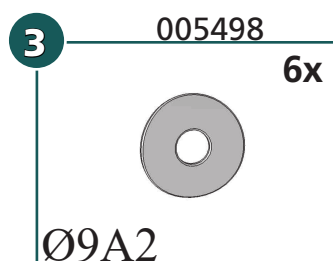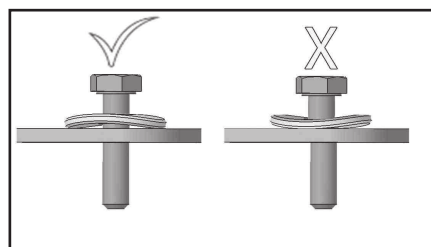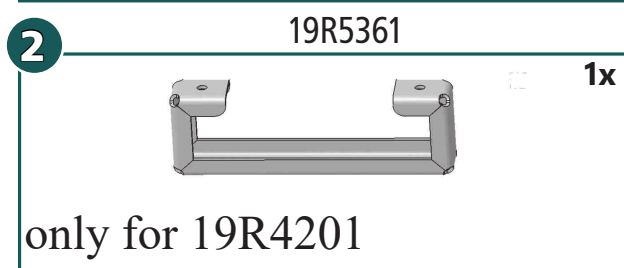

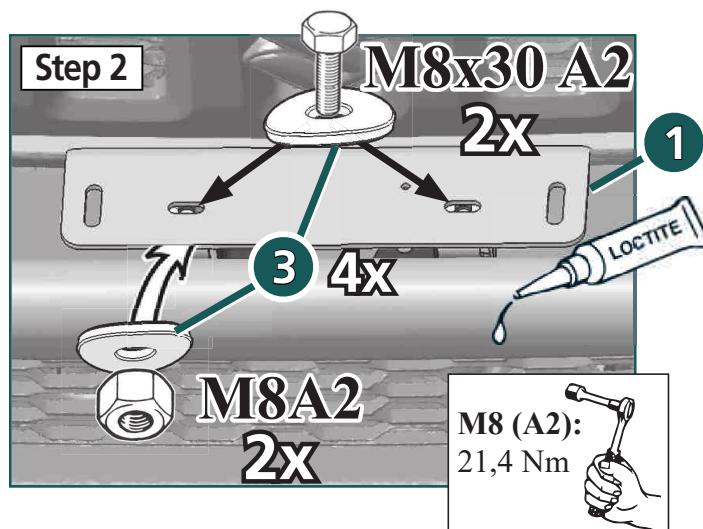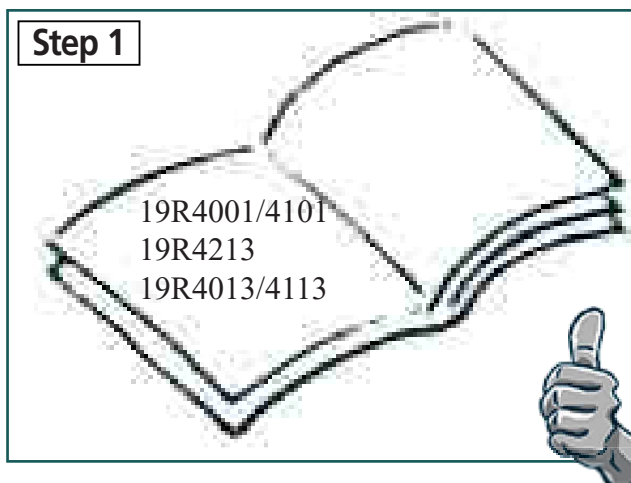

only for mounting with 19R4201

