


MONTAGEANLEITUNG

ASSEMBLING INSTRUCTIONS

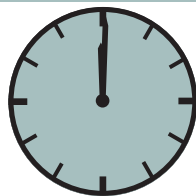

60 Minuten



weight: ca.3,8 kg

MUDGUARD FOR CENTER/SCHUTZBLECH FÜR MITTE

– Artikel-Nr: 19R 5614 steel galvanized

Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49(0)8 10 2 / 89 58-0

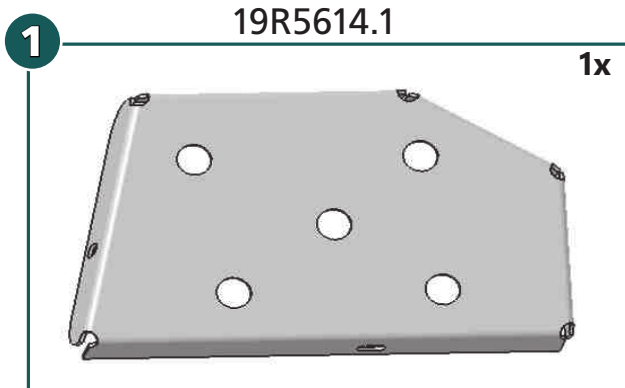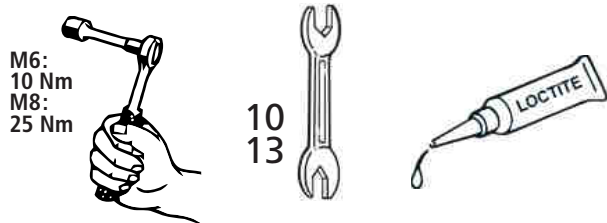

mounting kit: 19R9614



<p>2 19R5029 1x</p>	<p>3 19R5030 1x</p>	<table border="1"> <tr> <td></td> <td>M8x20; DIN 933 Zn</td> <td>3x</td> </tr> <tr> <td></td> <td>M6; DIN 934 Zn</td> <td>1x</td> </tr> <tr> <td></td> <td>Ø6,4; DIN 125 Zn</td> <td>1x</td> </tr> </table>		M8x20; DIN 933 Zn	3x		M6; DIN 934 Zn	1x		Ø6,4; DIN 125 Zn	1x
	M8x20; DIN 933 Zn	3x									
	M6; DIN 934 Zn	1x									
	Ø6,4; DIN 125 Zn	1x									
<p>4 19R5035 1x</p>	<p>5 19R5394 1x</p> <p>M6</p>										
<p>6 005497 3x</p> <p>Ø9</p>											

article no.:
19R5614 steel galvanized


Revision 1: 26.06.2019




Step 1

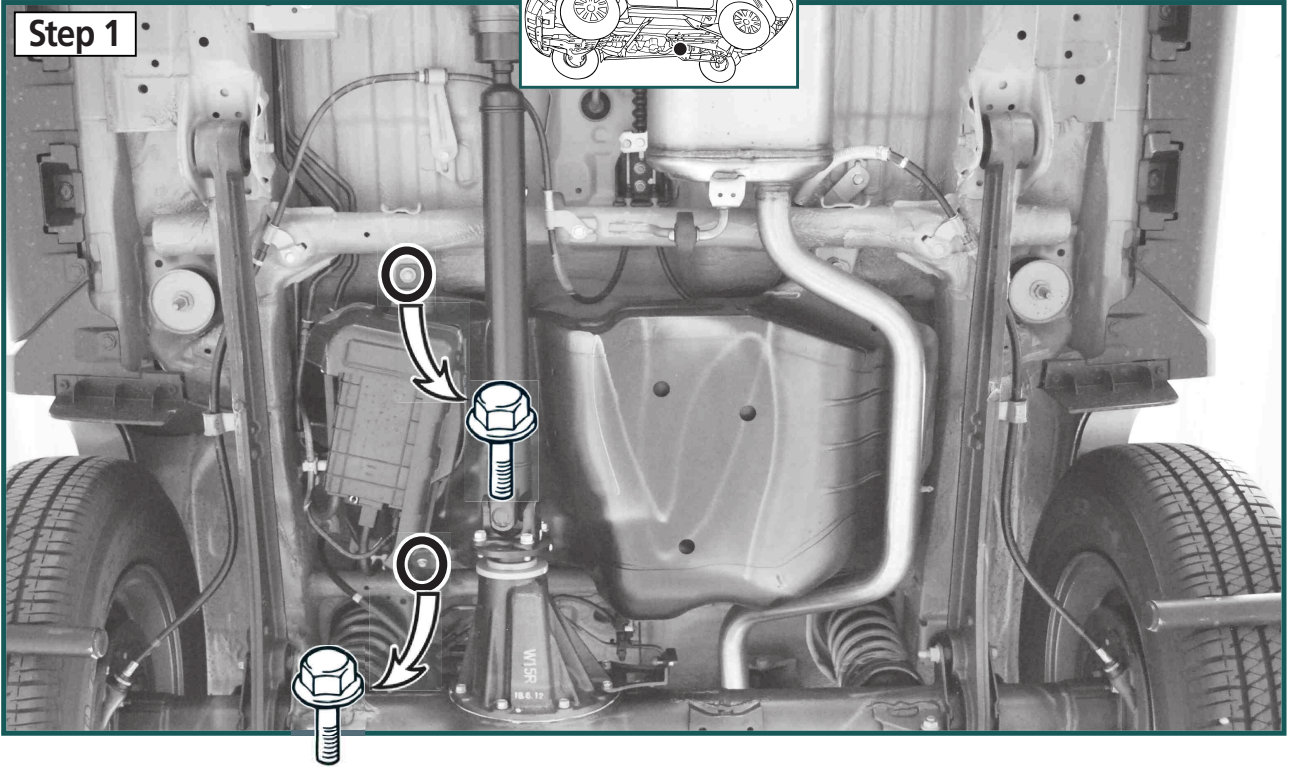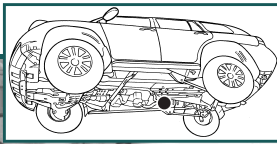


Step 2

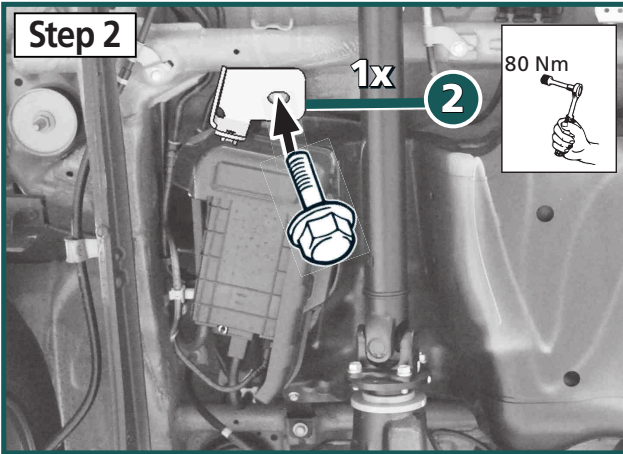

Step 3

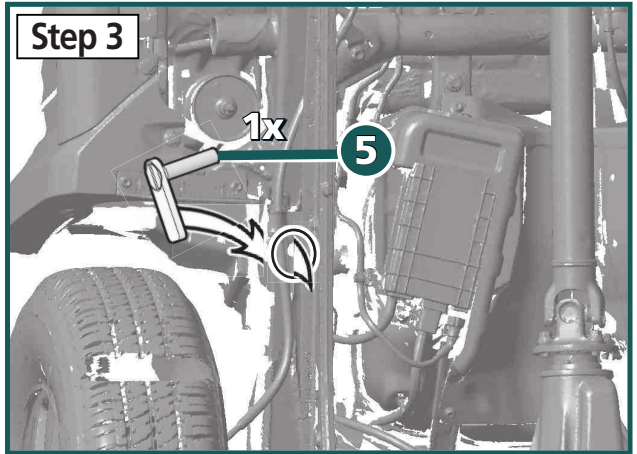

Step 4

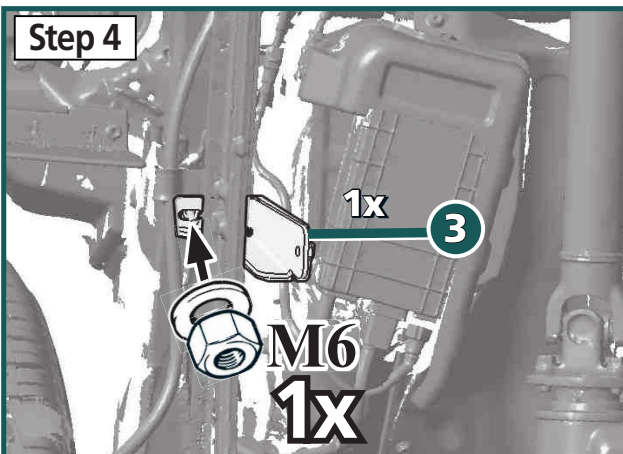

Step 5

