




MONTAGEANLEITUNG ASSEMBLING INSTRUCTIONS

3 Jahre Garantie

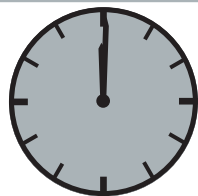

60 Minuten

weight: ca.1,2 kg


LAMP HOLDER (WITHOUT ROOF RACK) / LAMPENHALTER (OHNE DACHTRÄGER)

- Artikel-Nr: 19R4992S







Wild Land Drivers GmbH
Sportplatzstr. 4
D-85635 Höhenkirchen b.München

E-Mail: info@wild-land-drivers.de
Phone: +49 (0) 8 10 2 / 89 58-16

M6(A2):
8,8Nm
M8(A2):
21,4Nm
M10(A2):
44 Nm

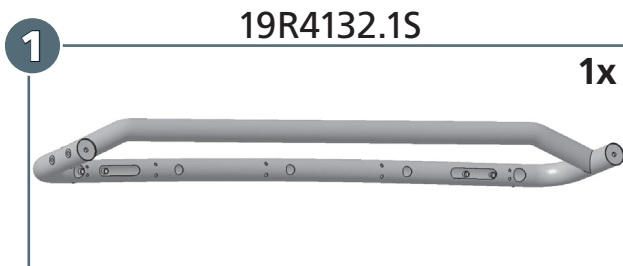

mounting kit: 19R9992

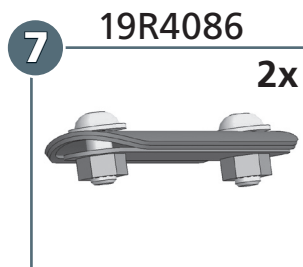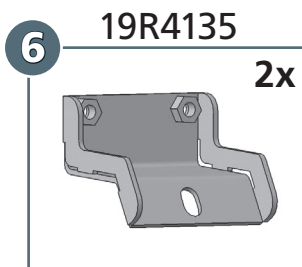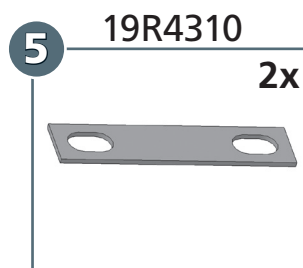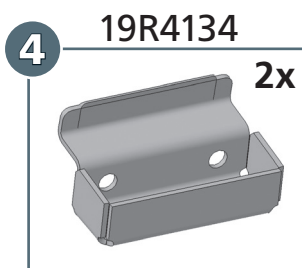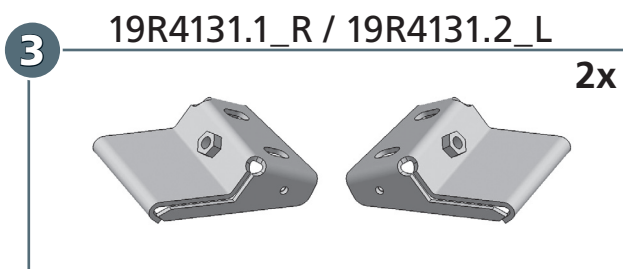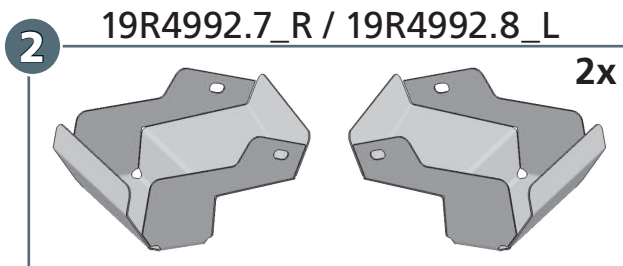

	M8x25; DIN 933 A2	8x
	M10x22; DIN 933 A2	2x
	M6x16; ISO 7380 A2	4x
	Ø6,4; DIN 125 A2	4x
	Ø8,4; DIN 125 A2	4x
	Ø8,4; DIN 9021 A2	4x
	Ø10,5; DIN 9021 A2	2x
	Ø8; DIN 127 A2	8x
	Ø10; DIN 127 A2	2x
	Moss-Verschlussstopfen Ø20; Art.-Nr. 10678	5x
	Plastik-Clip Art.-Nr. FTB055	7x
	Gummischeibe Art.-Nr. 0422 38725	2x
	Ringschraube M8; DIN 580 A2	2x
	Plastik-Clip Art.-Nr. 1654	10x

